

DIAPHRAGM CONTROLLED LOW PRESSURE / DIRECT ACTING MODEL DL

APPLICATION:

Pilot may be installed remotely from the control valve. The Pilot is used in the control of low pressure where the desired controlled pressure ranges from a few ounces to 20 psig on:

Vessels

Vent lines

Distribution systems

Inlet and recirculation on compressors, pressure

Used to produce a proportional pneumatic output signal when the monitored pressure rises above the set pressure. The pneumatic signal source is isolated from the monitored pressure.

FEATURES:

Single adjustment Filtered gas supply High accuracy Remote installation

CLASSIFICATIONS:

Non-Bleed / Intermittent Vent

SUPPLY PRESSURE:

Equal to or not less than 60% of maximum upstream pressure Diaphragm Assembly when used to operate low pressure control valves. 20-30 psig when used to operate high pressure control Supply Pressure valves. Controlled Pressure Output Pressure I/4" FNPT " FNPT 1/4" FNPT 1/4" FNPT



Standard Configuration Code †	Order Code	Operating Pressure	Max. W.P. psig ^{††}			
PDLDD2S	YIB2.5	.5 oz - 2.5 psig				
PDLDD3S	YIB5	1 oz - 5 psig	175			
PDLDD4S	YIB20	1 psig - 20 psig				


NOTES:

For standard & optional seals, metals, Cf Cv values, material specifications & dimensions see technical data on pages 09:I - 09:IV [†] For Corrosive service remove last "S" & replace with "C"

- [†] For code builder see page 09:00.3
- ^{††} Max W.P. values based on -20°F to 100°F




DIAPHRAGM CONTROLLED LOW PRESSURE / DIRECT ACTING MODEL DL DRAWING & PARTS LIST

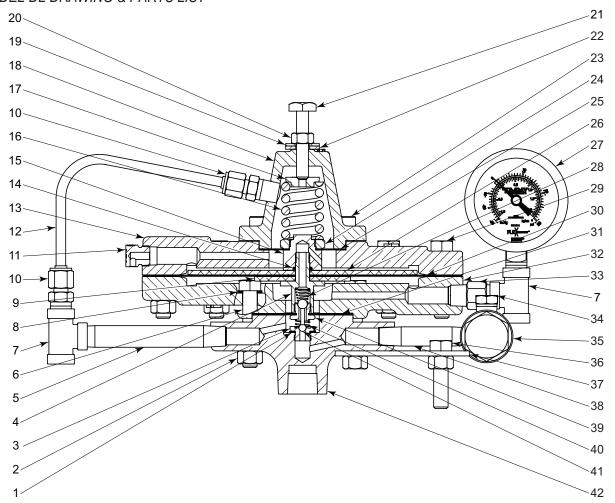

ITENA	OTV	DESCRIPTION		PART NO			ITENA	OTV	DESCRIPTION		PAR ⁻	ΓΝΟ
I I ⊏IVI	QII.			STANDARD	CORROSIVE		I I ⊏IVI	QII.	DESCRIPTION		STANDARD	CORROSIVE
1	1	Gasket *		118			20	1	Nut	П	922	
2	16	Nut		241			21	1	Adjusting Screw		5100	
3	1	Seat *		113	113SS6		22	1	Packing Seal	*	4490	
4	1	Stem		2913	2913SS6		23	6	Screw		7531	
5	1	Nipple		75	75SS6		24	1	Diaphragm Nut		5026	
6	4	Screw		191			25	1	Diaphragm	*	50	27
7	2	Tee		219	219SS6		26	1	Upper Diaphragm Plate		1208	1208SS6
8	4	Gasket *		242			27	1	Gauge		7704	
9	1	Lower [Diaphragm plate	1340	1340SS6		28	1	Spring	*	108	108HAC
10	2	Connector		874			29	10	Screw		236	
11	1	Vent Plug		147	147SS6		30	1	Diaphragm	*	1212	
12	1	Tubing		214SS6			31	1	Diaphragm	*	110	
13	1	Upper Housing		1206			32	1	Lower Housing		1356	
14	1	O-Ring	*	26	35		33	1	Nipple		648	648SS6
15	1	Diaphra	igm Stem	5091	5091S6		34	1	Plug		699	699SS6
16	1	Spring	20 lbs. (standard)	43	79		35	1	Filter		YAS	YASSS6
			5 lbs. (optional)	30	61		36	2	Bolt		43	30
			2.5 lbs. (optional)	15	27		37	1	Mount Bracket		44	28
17	1	Spring	20 lbs. (standard)	7148S6			38	1	Nipple		26	00
			5 lbs. (optional)	636SS6			39	1	Pilot Seat	*	565	565SS6
		Plate	2.5 lbs. (optional)				40	1	Spring	*	566	566HAC
18	1	Bonnet		50	5090		41	1	Pilot Plug	*	11	2
19	1 Washer		4492			42	1	Base Plate		96	2S	
*	* These parts are recommended spare parts and are stocked						oair kit	S.	Repair Kit		RWN RWNV	



CODE BUILDER
P SERIES (PILOTS)

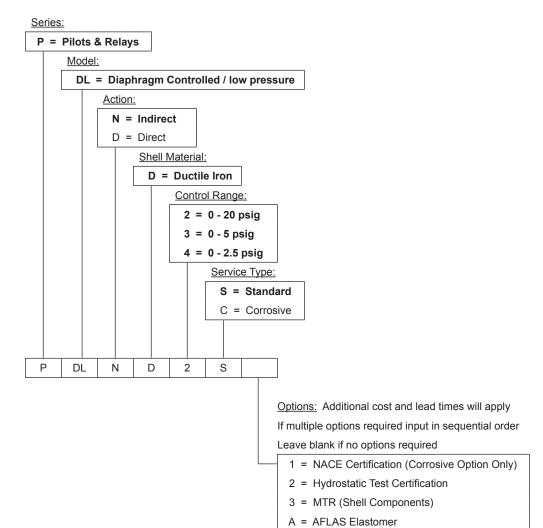

Not all selections available on all products listed. See product pages 01:30.1 - 01:30.4 for available options

H = HSN ElastomerV = FKM Elastomer

X = Export (Hydrostatic test, MTR & 3.1)