

**BISTABLE PILOT** MODEL BR

#### APPLICATION:


Any system where two temporary pressure signals are available. One signal to turn "ON" the pilot and one signal to turn "OFF" the pilot.

#### FEATURES:

Bistable operation Temporary signal will turn "ON" or "OFF" Intermittent vent pilot Semi-snap action

#### **CLASSIFICATIONS:**

Non-Bleed / Intermittent Vent

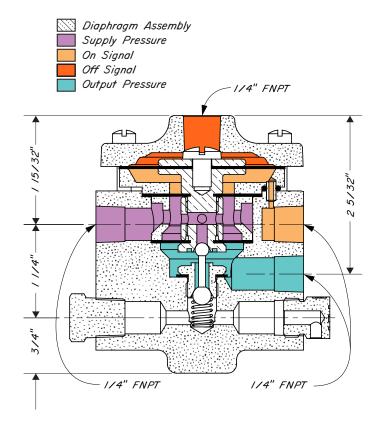



Standard	Order	On/Off	Supply Press	Output Press	Max. W.P.
Configuration Code †	Code	Signal	psig	psig	psig <sup>††</sup>
PBR0D0S	YAH1	20 - 30	20 - 30	0 or Supply	


### NOTES:

For standard & optional seals, metals, Cf Cv values, material specifications & dimensions see technical data on pages 09:I - 09:IV  $^\dagger$  For Corrosive service remove last "S" & replace with "C"

- † For code builder see page 09:00.4
- <sup>††</sup> Max W.P. values based on -20°F to 100°F



## BISTABLE PILOT MODEL BR DRAWING & PARTS LIST

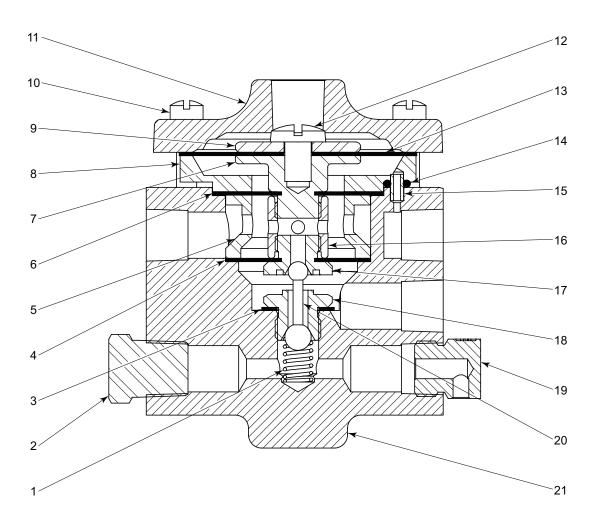


ITEN/	OTV	DECCRIPTION	PART NO			ITEN4	OTV	DESCRIPTION		PART NO	
I I E IVI	QIY.	DESCRIPTION	STANDARD	CORROSIVE		I I EIVI	ITEM QIY.	DESCRIPTION	ĺ	STANDARD	CORROSIVE
1	1	Spring *	585			12	1	Screw		2670SS6	
2	1	Plug	699			13	1	Diaphragm	*	8961	HSN
3	1	Gasket *	118			14	1	O-Ring	*	569l	HSN
4	1	Diaphragm *	2619			15	1	Jumper Tube		895	895SS6
5	1	Spool	2616	2616SS6		16	1	Spacer		581	581SS6
6	1	Diaphragm *	583HSN			17	1	Seat	*	113	113SS6
7	1	Lower Diaph. Plate	857	857SS6		18	1	Seat	*	565	565SS6
8	1	Housing	2617	2617SS6		19	1	Breather Plug		147	
9	1	Upper Diaph. Plate	2618	2618SS6		20	1	Pilot Plug	*	112	
10	6	Screw	573			21	1	Body		2615	2615SS6
11	1	Cover	2620	2620SS6				Repair Kit		RXY	
* These parts are recommended spare parts and are stocked as repair kits.											



Issued 11/23

# CODE BUILDER P SERIES (RELAYS)

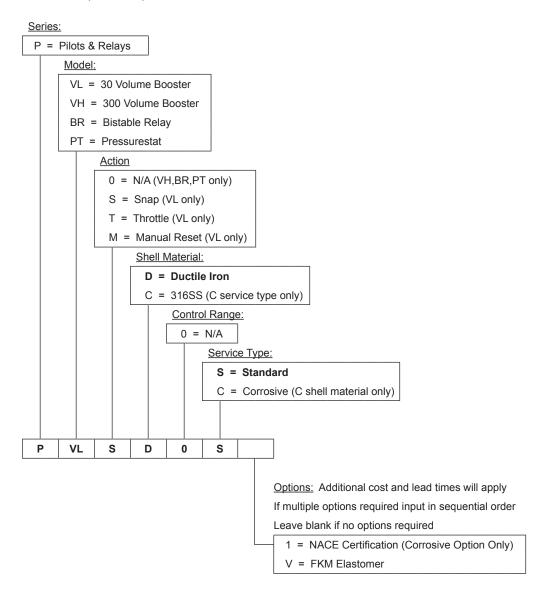

Not all selections available on all products listed. See product pages 01:40.1 - 01:70.2 for available options