

KIMRAY ELECTRIC ACTUATOR MENU NAVIGATION

CV: 0.0%
PV: 0.0%

MAIN OPERATING SCREEN

Underlined values indicate the active selection

From the main operating screen, press RIGHT to cycle through the menus.
Press UP to enter a selected menu.

UP/DOWN: cycle options/change values
RIGHT: accept/next menu

