


INSTALLATION

1. Feed cable through vented bolt with crimped cable stop on bottom.
2. Apply thread lock onto vented bolt threads and tighten into displacer.
3. Feed cable through hanger block and cable clamp.
4. Adjust to desired length and cut excess cable.

This Kit is compatible with any Kimray level controller.

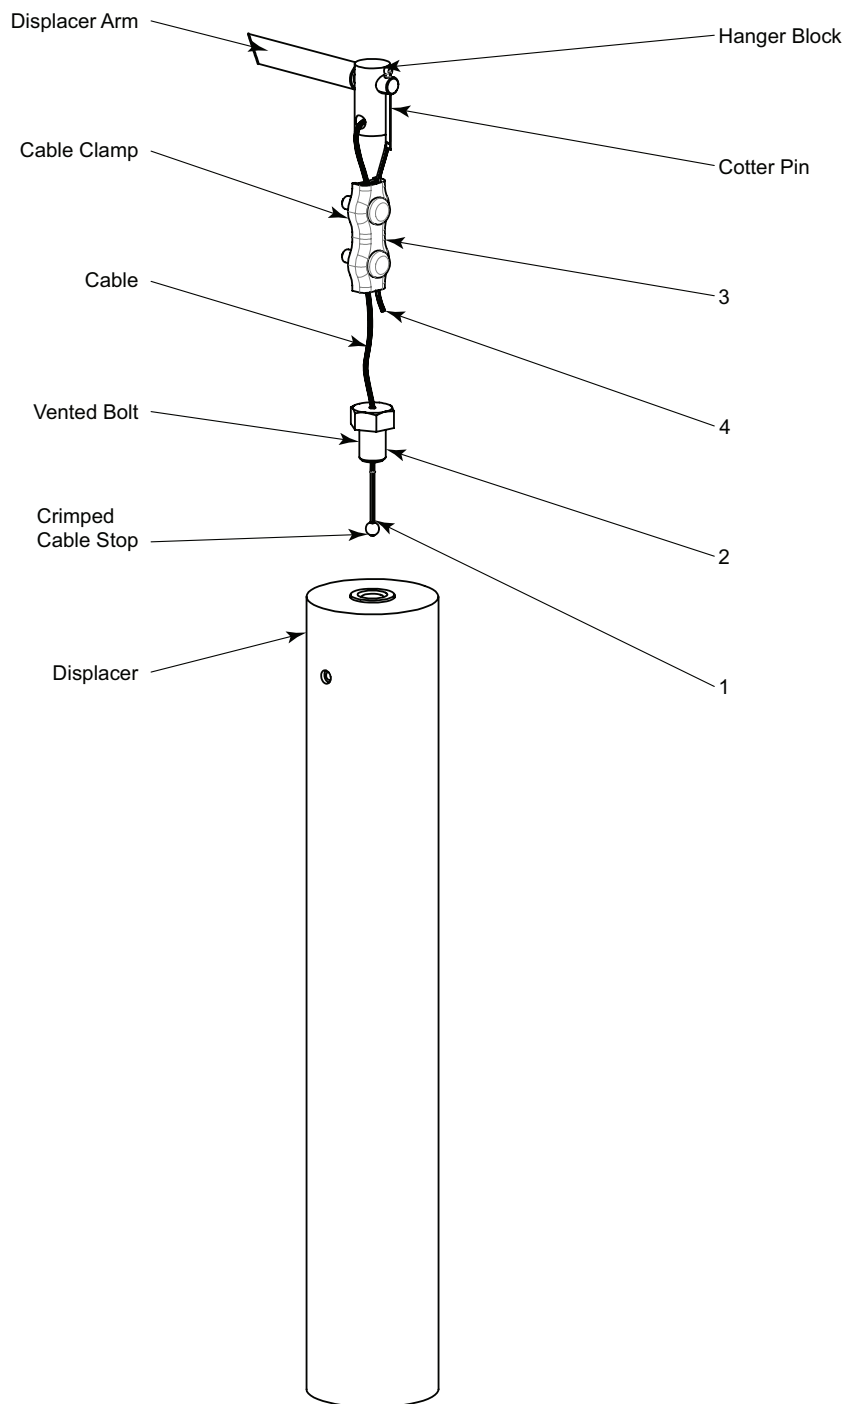

For questions or comments, contact your local Kimray authorized distributor, or visit www.kimray.com.

Kimray Inc.
52 NW 42nd Street
Oklahoma City, OK 73118

Customer Service: 405.525.6601 | service@kimray.com

Product Support: 405.525.4264 | ProductSupport@Kimray.com

All Pictures shown are for illustration purpose only. Actual product may vary due to product enhancement.