

#### CAUTION

Prior to installing, the instructions provided herein should be completely reviewed and understood before operating or repairing this equipment. All CAUTION and WARNING notes must be strictly observed to prevent personal injury or equipment damage.

#### Description

The Kimray supply gas regulator is used in pressure reducing service where a supply of constant reduced pressure is required for pneumatic instruments and pilot operated controllers.

This is most often used to control diaphragm pressure in a pressure control valve. Proper function can best be accomplished when the gas flowing through the pilot is clean and free of liquid.

#### Installation

Before installing the supply gas regulators, inspect for shipment damage and for foreign material that may have collected during shipment. Inspect the openings in the pilots and clean the pipe lines to remove scale, chips and debris.

Verify all pressure connections are tight before pressurizing the system.

Over pressure protection should also be provided if the regulator inlet pressure may exceed the safe working pressure of the equipment downstream.

To avoid injury or damage, install pressure-relieving or pressure limiting devices to prevent service conditions from exceeding those limits.

Consult the appropriate code, regulations, or standards.

Consideration should be given to the potential risk of injury or property damage due to escaping fluid. To avoid such risks, install the regulator in a safe location.

Remove the plastic plugs from the 1/4" NPT openings. 1/4" or 3/8" tubing (not provided) must be installed.

#### Pressure Range

Supply Gas Regulator (Figure 1)

Design Pressure: 5500 psig max.

Inlet Pressure: 4000 psig max.

Output Pressure: 10 - 250 psig

As you turn the adjusting screw **counterclockwise**, the set point pressure will **decrease**.

As you turn the adjusting screw clockwise, the set point pressure will increase.


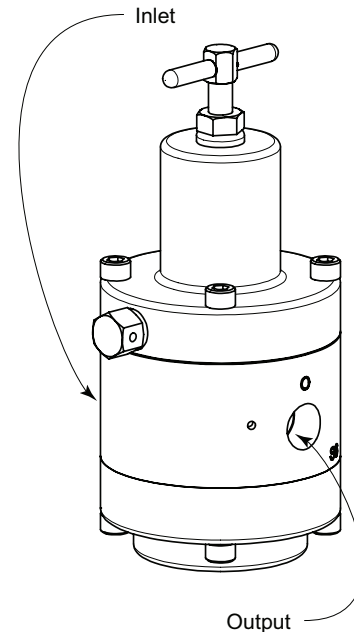


Figure 1

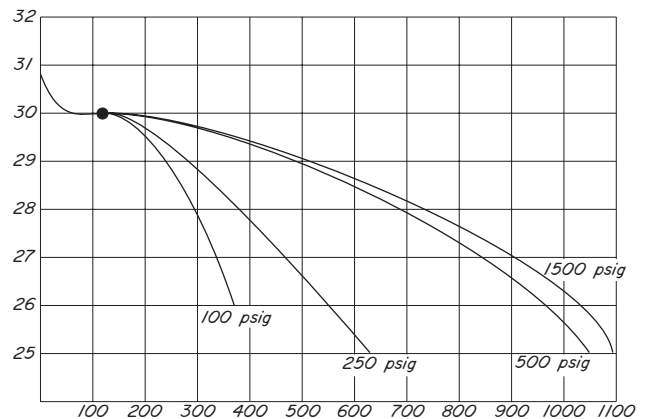

#### CAUTION

When ordered, the Supply gas regulator configuration and construction materials were selected to meet specific pressure, temperature, pressure drop and fluid conditions. Since some body/trim material combinations are limited in their pressure drop and temperature ranges, do not subject the high pressure Supply gas regulator to any other conditions without first contacting the Kimray Inc. sales office or a sales / applications representative.

**Start-up and Test**

With the installation completed and appropriate relief and check valves installed and set, slowly open the upstream and downstream shutoff valves. With a small amount of pressure on the sense line (10 to 20 psig), turn the adjusting screw out so it does not engage the spring. At this point a valve operated by the pilot will be positioned accordingly.

**Maintenance**

Maintenance should be performed on a regular basis. An initial inspection interval of 12 months is recommended. Depending on the service conditions of the Supply gas regulator, the inspection interval may be decreased or increased.

The Supply gas regulator can be repaired without being removed from the piping.

**Repair Tips**

- If pilot bleeds gas continuously, the pilot plug seat may be dirty.
- Evenly tighten the screws which hold the bonnet on.
- Diaphragms will harden with age.

Only use genuine Kimray replacement parts.

Repair kits and detailed repair instructions are available for each valve.

Visit [www.kimray.com](http://www.kimray.com) or contact your Kimray authorized distributor for additional product information and / or literature.

Inspection Schedule	
Seals	Should be replaced as needed. Check for cracks, swelling or if the seals feel hard, replace.
Pilot	Inspect spring, stem, and diaphragms once a year.
Bolts and Fittings	Make sure they are still tight.
Breather Plug	Verify that vent holes are facing down and clear of any obstruction.
*Under severe operating conditions, the maintenance schedule described will not be adequate and a shorter maintenance interval may be required.	

Troubleshooting		
Problem	Possible Cause(s)	Possible Solution
Pilot bleeds gas continuously.	The pilot plug seat may be dirty.	Clean pilot plug seat.
Minimum set point cannot be set to zero.	Bonnet screws are over tightened.	DO NOT OVER TIGHTEN bonnet screws.
Constant output when none should be present.	A pilot seat may be loose. Instrument supply is above 30 psig (direct acting pilots only).	Tighten the pilot seat.

**WARNING**

Before beginning installation:

- Read and follow instructions.
- Make sure the valve cannot operate during installation.

Do not exceed the maximum supply pressure specified on the valve name-plate.

Never tighten any fitting or the main connections to the valve while there is pressure on the line.

**WARNING**

Before any service, be certain that the valve is fully isolated and that all pressure upstream and downstream has been relieved. Use bypass valves or fully shut off the process.

Be sure that any operating or instrument gas lines have been disconnected.

Never stand directly in front of or over a valve when the system is pressurized. The valve could suddenly open, blowing debris into the person's face and eyes.

**WARNING**

A leaking valve is an indication that service is required. Failure to take valve out of service immediately may cause a hazardous condition.

**NOTE**

If conditions indicate the possibility of backward flow you may wish to install check valves. Never assume that a check valve is fully blocking the downstream line.

For questions or comments, contact your local Kimray authorized distributor, or visit [www.kimray.com](http://www.kimray.com).

Kimray Inc.  
52 NW 42nd Street  
Oklahoma City, OK 73118

Customer Service: 405.525.6601 | [service@kimray.com](mailto:service@kimray.com)

Product Support: 405.525.4264 | [ProductSupport@Kimray.com](mailto:ProductSupport@Kimray.com)